


# Operating and installation instructions

## Gas hobs

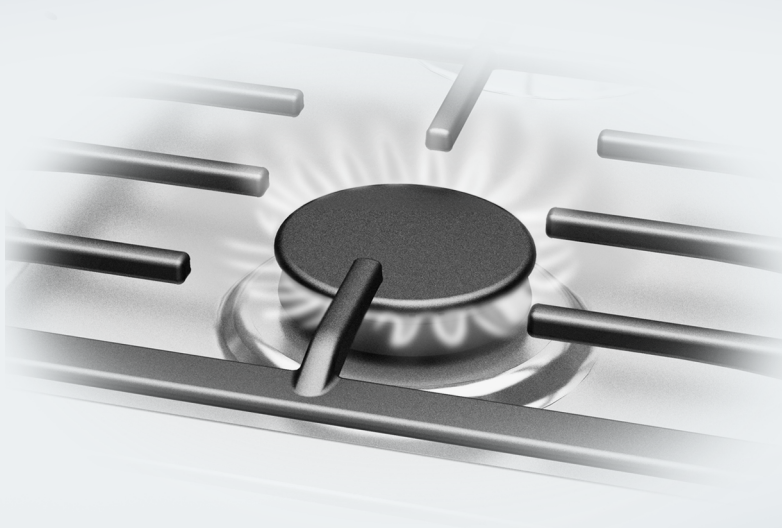

To avoid the risk of accidents or damage to the appliance it is **essential** to read these instructions before it is installed and used for the first time.

- 
- (GB)** This appliance can be used in countries other than those specified on the appliance. It is, however, set up for connection to the gas and electricity supplies in the countries specified. For use in other countries please contact the Miele spare parts or customer service department in your country.
- (D)** Das Gerät ist auch für den Gebrauch in anderen als auf dem Gerät angegebenen Bestimmungsländer zugelassen. Die landesspezifische Ausführung und die Anschlussart des Gerätes haben wesentlichen Einfluss auf den einwandfreien und sicheren Betrieb. Für den Betrieb in einem anderen als auf dem Gerät angegebenen Bestimmungsland wenden Sie sich bitte an den für das Land zuständigen Kundendienst.
- (E)** El aparato está autorizado para el uso en países diferentes a los países de destino indicados. La ejecución específica para cada país y el tipo de conexión del aparato influyen de forma decisiva en el funcionamiento correcto y seguro. Para el funcionamiento en un país diferente al país de destino indicado en el aparato, consulte al Servicio Post-venta autorizado para el país.
- (F)** Cet appareil est également homologué dans des pays différents de ceux mentionnés sur l'appareil. Pour que l'appareil fonctionne parfaitement et en toute sécurité, il est important de disposer de l'exécution spécifique au pays et du type de raccordement approprié. Pour le fonctionnement dans un pays autre que celui spécifié sur l'appareil, veuillez vous adresser au service après-vente du pays où sera installé l'appareil.
- (I)** L'apparecchio può essere usato anche in paesi diversi da quello indicato sull'apparecchio stesso. Tuttavia, le varianti specifiche di un determinato paese e il tipo di allacciamento alla rete hanno un'importanza fondamentale per il suo sicuro e corretto funzionamento. Per questo se si vuole usare l'apparecchio in un paese diverso rivolgersi al servizio di assistenza tecnica Miele del paese in cui si intende usarlo.
- (NL)** Het apparaat is ook toegelaten voor gebruik in andere landen dan de landen die op het apparaat vermeld staan. De specifieke uitvoering en de aansluitwijze zijn van groot belang voor het goed en veilig functioneren. Neem daarom contact op met de Technische Dienst van de fabrikant in uw land als u het apparaat in een land wilt gebruiken dat niet op het apparaat vermeld staat.

---

## **Gas-heated appliances**

### **Safety precautions to take if you smell gas**

- Turn off the gas emergency control valve immediately.  
This is usually located near the gas meter.
- Eliminate all sources of ignition in a safe manner.  
Do not smoke, light cigarette lighters or matches.
- Do not operate electrical lights or switches, i.e. do not switch them "On" or "Off".
- Open all doors and windows to ventilate the area.
- If the smell of gas persists, evacuate the building.

### **In the UK you must now:**

- Call the Gas Emergency Contact Centre (Tel: 0 800 111 999)

**For any gas work in the UK always use a Gas Safe registered engineer.**



**In other countries please follow relevant country specific procedures on gas.**

# Contents

---

<b>Guide to the appliance</b> .....	6
KM 2312 .....	6
KM 2334 / KM 2335 .....	7
Accessories supplied .....	9
<b>Warning and Safety instructions</b> .....	10
<b>Caring for the environment</b> .....	18
<b>Before using for the first time</b> .....	19
<b>Operation</b> .....	20
Controls .....	21
Switching on .....	21
Regulating the flame .....	22
Switching off .....	22
<b>Pans</b> .....	23
Wok ring .....	24
Combi insert .....	24
<b>Energy saving tips</b> .....	25
<b>Safety features</b> .....	26
Thermo-electric ignition safety device .....	26
<b>Cleaning and care</b> .....	27
<b>Problem solving guide</b> .....	31
<b>Optional accessories</b> .....	33
<b>Safety instructions for installation</b> .....	34
<b>Hobs with frame</b> .....	37
Building-in dimensions .....	37
KM 2312 .....	37
KM 2334 .....	38
<b>Flush fit hob</b> .....	41
Building-in dimensions .....	41
KM 2335 .....	41
Installation .....	43
<b>Securing the appliance</b> .....	46
After installation .....	46
<b>Electrical connection</b> .....	47
<b>Gas connection</b> .....	49
<b>Burner ratings</b> .....	51

**Conversion to another type of gas** . . . . . 52

Jet table . . . . . 52

To change the main jets . . . . . 53

To change the small jets . . . . . 55


Function test . . . . . 56

**After sales service, data plate, guarantee** . . . . . 57

# Guide to the appliance

---

## KM 2312

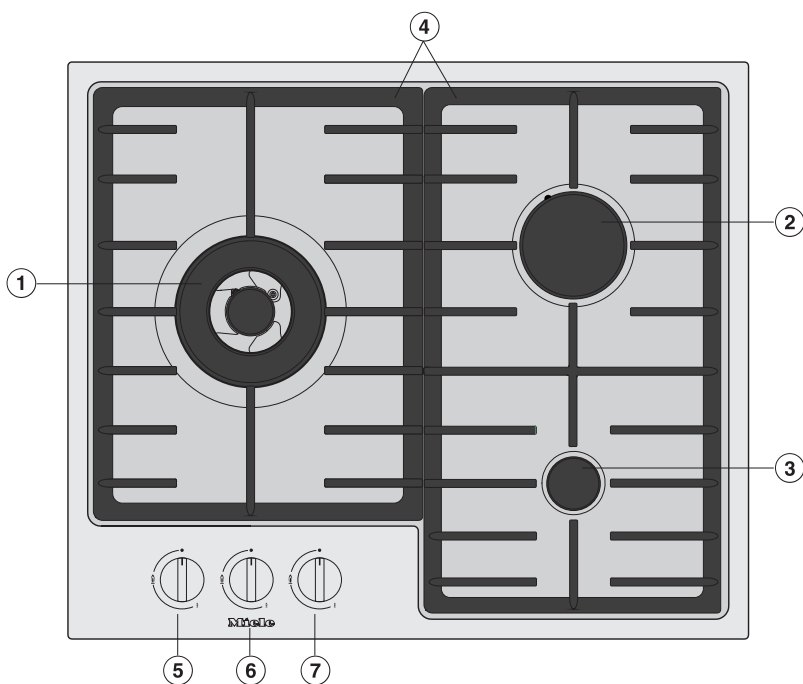


- ① Wok burner
- ② Large burner
- ③ Small burner
- ④ Pan support (two-part)

Controls:

- ⑤ Left
- ⑥ Back right
- ⑦ Front right

## KM 2334 / KM 2335

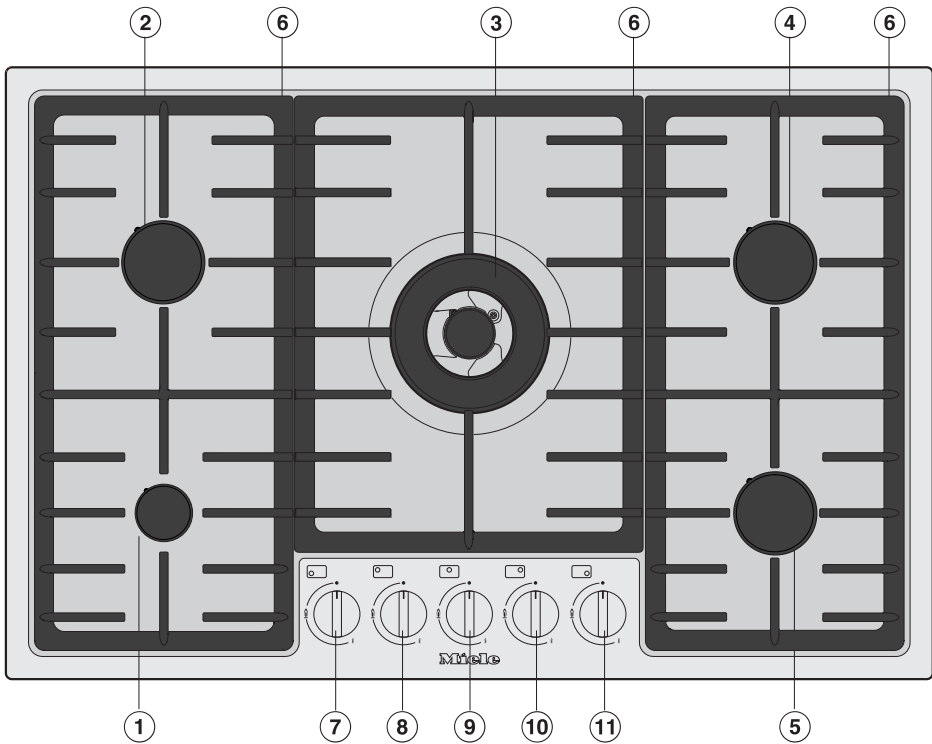

① Small burner

② Medium burner

③ Wok burner

④ Medium burner

⑤ Medium burner

⑥ Pan support (in three sections)

Controls:

⑦ Front left

⑧ Back left

⑨ Middle


⑩ Back right

⑪ Front right

# Guide to the appliance


## Burner

### Wok burner

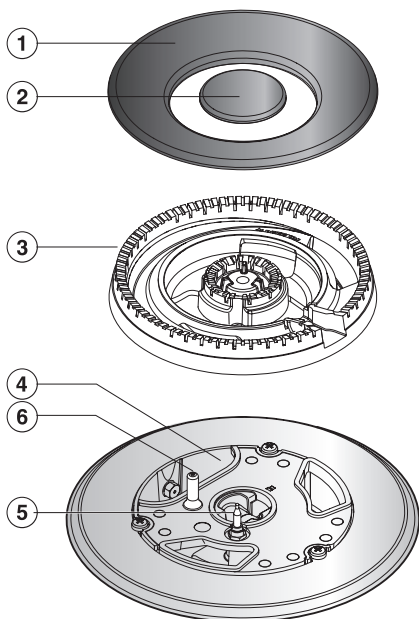

- ① Outer burner cap
- ② Inner burner cap
- ③ Burner head
- ④ Burner base
- ⑤ Ignition safety device
- ⑥ Ignitor

### Small, medium and large burners

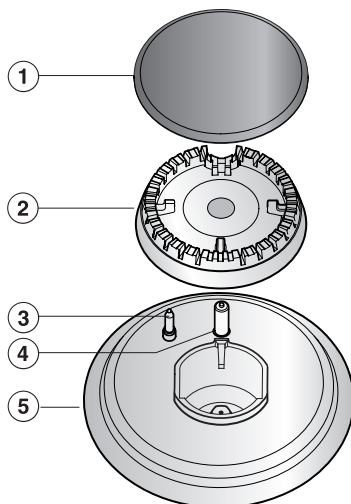


- ① Burner cap
- ② Burner head
- ③ Ignition safety device
- ④ Ignitor
- ⑤ Burner base



## Accessories supplied

The accessories supplied with your appliance as well as a range of optional ones are available to order from Miele (see "Optional accessories").

### Wok ring



The Wok ring supplied with your appliance can be used in instances where extra stability is required. It is particularly suitable for Woks with a rounded base.

### Combi insert for small pans



For small and large pans, see "Pans".

## Warning and Safety instructions

---

This appliance complies with all relevant local and national safety requirements. Improper use of the appliance can, however, present a risk of both personal injury and material damage.

To avoid the risk of accidents and damage to the appliance, please read these instructions carefully before installation and using it for the first time. They contain important notes on installation, safety, operation and care.

Keep these instructions in a safe place and ensure that new users are familiar with the content. Pass them on to any future owner.

### Correct application

► This gas hob is not designed for commercial use. It is intended for use in domestic households and similar working and residential environments.

► It is intended for domestic use only to cook food and keep it warm.

Any other usage is not supported by the manufacturer and could be dangerous. Miele cannot be held liable for damage resulting from incorrect or improper use or operation.

► The gas hob is not intended for outdoor use.

► The appliance may only be used by people with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they are supervised whilst using it, or have been shown how to use it in a safe way and understand the hazards involved.

## Safety with children

- ▶ This appliance is not a toy! To prevent the risk of injury, do not allow children to play with it or use the controls. Please supervise children whilst you are using the appliance.
- ▶ Children under 8 years of age must be kept away from the hob unless they are constantly supervised.
- ▶ Children 8 years and older may only use, clean or maintain the hob without supervision if they have been shown how to do so in a safe way and understand the hazards involved.
- ▶ The appliance gets hot when in use and remains hot for quite a while after it has been switched off. Keep children well away from the appliance until it has cooled down and there is no danger of burning.
- ▶ Do not store anything which might arouse a child's interest in storage areas above or next to the hob. Otherwise they could be tempted into climbing onto the appliance. Danger of burning.
- ▶ Keep all pans out of reach of children. Turn pan handles inwards away from the edge of the hob. Danger of burning or scalding.
- ▶ Packaging, e.g. polystyrene and plastic wrappings, must be kept out of the reach of babies and young children. Danger of suffocation. Dispose of or recycle all packaging safely as soon as possible.

# Warning and Safety instructions

---

## Technical safety

- ▶ Before installation, check the appliance for visible signs of damage. Do not install and use a damaged appliance. It could be dangerous.
- ▶ The electrical safety of this appliance can only be guaranteed if correctly earthed. It is most important that this basic safety requirement is observed and tested regularly, and where there is any doubt, the household wiring system should be inspected by a qualified electrician. Miele cannot be held liable for the consequences of an inadequate earthing system (e.g. electric shock).
- ▶ Before connecting the appliance to the mains electricity supply, make sure that the data quoted on the data plate match the household mains supply, otherwise the appliance could be damaged. Consult a qualified electrician if in any doubt.
- ▶ For safety reasons, this appliance may only be used when it has been built in.
- ▶ Connection to the gas supply must be carried out by a suitably qualified and competent person in strict accordance with current local and national safety regulations, e.g. a **Gas Safe** registered technician in the U.K.



If the appliance is supplied without a plug, or if the plug is removed, it must be connected to the mains electricity supply by a suitably qualified and competent electrician in strict accordance with current local and national safety regulations. The manufacturer cannot be held liable for damage caused by incorrect installation or connection.

## Warning and Safety instructions

---

- ▶ Never open the outer casing of the appliance. Tampering with electrical connections or components and mechanical parts is highly dangerous to the user and can cause operational faults.
- ▶ Installation, maintenance and repairs may only be carried out by a suitably qualified and competent person in strict accordance with current national and local safety regulations.  
Repairs and other work by unqualified persons could be dangerous. Miele cannot be held liable for unauthorised work.
- ▶ During installation, maintenance and repair work, the appliance must be disconnected from the gas supply and mains electricity supply.
- ▶ While the appliance is under guarantee, repairs should only be undertaken by a service technician authorised by Miele. Otherwise the guarantee is invalidated.
- ▶ Faulty components must only be replaced by genuine Miele original spare parts. The manufacturer can only guarantee the safety of the appliance when Miele replacement parts are used.
- ▶ The appliance is not intended for use with an external timer switch or a remote control system.
- ▶ If the connection cable is damaged, it must be replaced by a suitably qualified electrician with a special connection cable of type H 05 V V-F (pvc insulated), available from the Miele Spare Parts Department.
- ▶ Do not connect the appliance to the mains electricity supply by a multi-socket adapter or an extension lead. These do not guarantee the required safety of the appliance (e.g. danger of overheating).
- ▶ Do not use the hob if it is faulty. Switch it off immediately and disconnect it from the mains electricity supply and the gas supply. Call Miele Service.

## Warning and Safety instructions

---

► In areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the appliance and its surroundings in a clean condition at all times. Any damage which may be caused by cockroaches or other vermin will not be covered by the guarantee.

### Correct use

► The appliance gets hot when in use and remains hot for quite a while after it has been switched off. Do not touch it whilst it could still be hot.

► If a cooker hood is installed above the gas hob, ensure that the burners are always covered with a pan when in use. Otherwise flames could reach the cooker hood, parts of which could then be damaged or set on fire.

► Do not leave the appliance unattended whilst it is being used. Oil and fat are potential fire hazards as they can ignite if overheated.

► If oil or fat does catch fire, do not attempt to put out the flames with water. Use a suitable fire blanket, saucepan lid, damp towel or similar to smother the flames.

► Do not use the appliance to heat up the room. Due to the high temperatures radiated, objects near the appliance could catch fire. The life of the appliance could also be reduced.

► Do not flambé under a cooker hood. The flames could set the cooker hood on fire.

► Always use heat-resistant pot holders or gloves when working with a hot appliance. Ensure that they do not come into contact with the flames. Do not use large cloths, tea towels or similar as the ends could touch the flames and catch fire. Take care not to let the gloves get damp or wet, as this causes heat to transfer through the material more quickly with the risk of scalding or burning yourself.

## Warning and Safety instructions

---

- ▶ Do not use the appliance as a resting place for anything else. The article could melt or catch fire if residual heat is still present or if the appliance is switched on by mistake.
- ▶ Do not cover the hob with, e. g. with a hob cover, a cloth or protective foil. This could present a fire hazard if the appliance is switched on by mistake or if it is still warm.
- ▶ Do not use plastic or aluminium foil containers as these melt at high temperatures and could catch fire.
- ▶ Do not heat up unopened tins of food on the hob as pressure will build up in the tin, causing it to explode. This could result in injury and scalding or damage.
- ▶ Make sure all the components of the gas burners have been correctly assembled before switching on.
- ▶ Pans must be the correct size for the burner they are used on (see "Suitable pans"). A pan which is too small will be unstable on the pan support. If the pan diameter is too large, flames can spread out to the sides and damage or burn the worktop, wall claddings or surrounding units and also parts of the hob. Miele cannot be held liable for this type of damage.
- ▶ Ensure that the flames from the burner do not spread out beyond the base and up the sides of the pan.
- ▶ Unless the pan manufacturer states that you can do so, do not use pans with very thin bases on this hob, and never heat up empty pans as they could get damaged. This could also damage the appliance.
- ▶ The pan support supplied must always be used. Pans must not be placed directly on the burner.
- ▶ Do not store any inflammable objects near the gas hob.

## Warning and Safety instructions

---

- ▶ Remove splashes of fat and other food debris from the surface as soon as possible. These are a fire hazard.
- ▶ Replace the pan supports carefully to avoid scratching the surface of the hob.
- ▶ Using a gas hob results in the build-up of heat, moisture and combustion products in the room in which it is installed. To ensure that there is adequate ventilation, especially when the appliance is in use: make sure natural ventilation to the room is unhindered or use a mechanical ventilation device (e.g. a cooker hood).
- ▶ Intensive and prolonged use of the appliance may result in a requirement for additional ventilation, e.g. opening a window or a more effective form of ventilation, e.g. use of a cooker hood on a higher setting.
- ▶ When using the gas hob an extractor hood or a ventilation facility must be used.
- ▶ When using an electrical appliance, e.g. a hand-held food blender, near the gas hob, ensure that the cable of the electrical appliance does not come into contact with the hot appliance. The insulation on the cable could become damaged, giving rise to an electric shock hazard.
- ▶ Spray canisters, aerosols and other inflammable substances must not be stored in a drawer under the hob. Cutlery inserts must be heat-resistant.
- ▶ Do not use pans that are large enough to cover more than one burner. The resulting build-up of heat could damage the appliance.
- ▶ Avoid allowing liquids or foods containing salt to spill onto the hob. If salty foods or liquids do get on the hob, they should be removed as soon as possible to avoid the risk of corrosion.



## Warning and Safety instructions

---

- ▶ If the appliance is installed behind a kitchen furniture door, it may only be used with the furniture door open. Only close the door if the appliance is switched off.
- ▶ If the appliance has not been used for a long period of time it should be thoroughly cleaned before it is used again. It is also advisable to have the appliance tested for safety.

Miele cannot be held liable for damage caused by non-compliance with these Warning and Safety instructions.

# Caring for the environment

---


## Disposal of the packing material

The packaging is designed to protect the appliance from damage during transportation. The packaging materials used are selected from materials which are environmentally friendly for disposal and should be recycled.

Recycling the packaging reduces the use of raw materials in the manufacturing process and also reduces the amount of waste in landfill sites.

## Disposing of your old appliance

Electrical and electronic appliances often contain valuable materials. They also contain materials which, if handled or disposed of incorrectly, could be potentially hazardous to human health and to the environment. They are, however, essential for the correct functioning of your appliance. Please do not therefore dispose of it with your household waste.

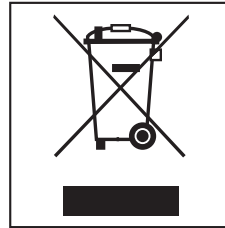

Please dispose of it at your local community waste collection/recycling centre or contact your dealer for advice. Ensure that it presents no danger to children while being stored for disposal.

## Before using for the first time

---

Please stick the extra data plate for the appliance supplied with this documentation in the space provided in the "After sales service, data plate" section of this booklet.

### Cleaning for the first time

- Remove any protective foil.
- Clean all removable parts of the burners with a solution of warm water and a little washing-up liquid applied with a soft sponge. Dry all parts thoroughly after cleaning and then reassemble the burners (see "Cleaning and care").
- Before using for the first time, clean the appliance with a damp cloth only and then wipe dry.

The metal components have a protective coating which may give off a slight smell when heated up for the first time.

The smell and any vapours given off do not indicate a faulty connection or appliance, and they are not harmful to health.

# Operation

---

The control is used to ignite the burner and to regulate the strength of the flame.


The burners can only be switched on by pressing in the appropriate control and turning it anti-clockwise, and switched off by turning the control clockwise. The outer flame ring on the wok burner can only be switched on and off by pressing the control in and turning it the appropriate way.

The following will **cause damage** to the appliance:

- Switching the burner on without pressing the control down,
- Switching off a burner by turning the control clockwise,
- Switching the outer flame ring on or off without pressing the control down,
- Switching the burner off by turning the control anti-clockwise.

The manufacturer will not accept liability for any damage resulting from incorrect operation.

## Controls

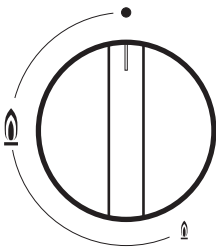

The control is used to ignite the burner and to regulate the strength of the flame.

● The gas supply is turned off

🔥 Strongest flame

🔥 Weakest flame

## Switching on

- The control for the burner required must be pressed in and turned anti-clockwise to the largest flame symbol to switch on.

When a control is operated, a spark is produced on all cooking zones. This is not a fault.

- When the flame ignites, keep the control pressed in for 8-10 seconds, and then let it go.
- If the flame goes out, turn the control to "●". Wait for at least one minute before trying again, keeping the control pressed in for a few extra seconds if necessary.

If the burner does not ignite the second time, turn the control to "●", and see "Problem solving guide".

## In the event of a power cut

If there is an interruption to the electricity supply the gas can be ignited with a match.


- Press in the relevant control and turn it anti-clockwise to the largest flame symbol.
- Hold the control pressed in and light the gas at the burner with a match.

Keep the control pressed in for a further 8-10 seconds and then release it.

# Operation

---

## Regulating the flame



Regulate the flame so that it does not spread out beyond the sides of the pan. As the outer part of the flame is much hotter than the centre, the tips of the flames should stay beneath the pan base. Flame tips which extend beyond the sides of the pan merely warm up the air in the room and can also damage pan handles and increase the risk of injury.

The burners can be regulated at any level between the strongest and weakest flame.

## Switching off

- Turn the control clockwise to position "●".

This stops the flow of gas and the flame goes out.

Do not turn the control past the ● position.

Burner	Min. pan base diameter in cm	
Small	10	
Medium	10	
Large	12	
Wok	15	
	Max. diameter at top of pan in cm	
	Without	With
	Combi insert	
Small	22	-
Medium	22	-
Large	24	-
Wok	26	30


- Refer to the chart above and ensure that the pan diameter falls within the minimum and maximum diameters given for the burner you are using. A pan which is too small will be unstable on the pan support. If the pan base diameter is too large, flames can spread out to the sides and damage or burn the worktop, wall claddings or surrounding units and also parts of the hob. The manufacturer cannot be held liable for this type of damage.
- Remember when purchasing new pans that manufacturers usually refer to the diameter at the top of the pan in their documentation.
- Any heat-resistant pans can be used.
- Pans with thick bases are preferable as these distribute heat more evenly. With thin bases, there is a danger of food overheating in places. Stir the food frequently.
- Always place pans on the pan support supplied. Pans must not be placed directly on the burner.
- Place pans securely on the pan rest to minimise the risk of tipping.
- Do not use pots or pans with bases with pronounced edges or ridges, e.g. cast iron pans.



# Pans

---

## Wok ring

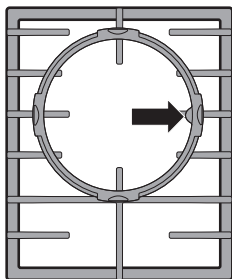

The Wok ring supplied with your appliance can be used in instances where extra stability is required. It is particularly suitable for Woks with a rounded base.

Make sure that the wok ring is located securely in its correct position.

## Combi insert

The combi insert **must** be used if you wish to use


- a pan with a smaller diameter base than the minimum given in the table. The ring ensures that the pan will sit securely on the hob, and prevents it from tipping.
- a large pan. The combi insert will prevent damage to the worktop, and the stainless steel trough from becoming discoloured. Refer to the information given in the table.



## Energy saving tips

---

- Use a pan lid whenever possible to minimise heat loss.
- Cook with as little water as possible.
- Cooking times are greatly reduced when using a pressure cooker.
- Turn the flame down promptly to a lower setting when the pan has come to the boil.
- Wide, shallow pans are preferable to tall, narrow ones. They will heat up faster.



# Safety features


---

## Thermo-electric ignition safety device

This appliance has a thermo-electric ignition safety device which cuts off the supply of gas to a burner if the flame goes out, for example if food has boiled over, or if there was a sudden draught.

- To use the burner again, turn the control clockwise to the "●" position, and then switch it back on as normal.

The safety cut-out operates independently from the electricity supply. This means that it will still work if the hob is used during a power cut (see "Use during a power cut").

 Do not use a steam cleaning appliance to clean this appliance. The steam could reach electrical components and cause a short circuit.

- The appliance should be cleaned after each use. Allow the appliance to cool down to a safe temperature before cleaning.
- To avoid water marks and limescale deposits, use a soft cloth to dry surfaces that have been cleaned with water.
- Stubborn soiling should be soaked first.
- Remove any soiling immediately. Food which boils over onto the hot hob can cause the burner components and the stainless steel surface of the hob to discolour.
- The surfaces of the burner components will become more matt with time. This is quite normal and will not affect the operation of the hob.


### **To avoid damaging the surface of your appliance, do not use:**

- cleaning agents containing soda, alkalines, ammonia, acids or chlorides,
- cleaning agents containing descaling agents,
- stain or rust removers,
- abrasive cleaning agents, e.g. powder cleaners and cream cleaners,
- solvent-based cleaning agents,
- dishwasher cleaner,
- grill and oven cleaners,
- glass cleaning agents,
- hard, abrasive brushes or sponges, e.g. pot scourers, or sponges which have been previously used with abrasive cleaning agents,
- sharp pointed objects  
(these can damage the seal between the frame and the worktop)

## Cleaning and care

	Cleaning	Notes
<b>Stainless steel surfaces</b>	<p>Clean stainless steel surfaces using an E-Cloth (see "Optional accessories") or with a solution of warm water and a little washing-up liquid applied with a soft sponge.</p> <p>If necessary, you could use Miele ceramic and stainless steel hob cleaner (see "Optional accessories") and the scouring pad on the reverse of a washing-up sponge. Apply with an even pressure following the direction of the "grain".</p> <p>Miele conditioning agent for stainless steel can be used after cleaning to help prevent re-soiling (see "Optional accessories"). Follow the instructions on the packaging.</p>	<p><b>Printed surfaces</b> (Flame symbols)</p> <p>Remove any soiling which comes into contact with the printed flame symbols straight away. Soiling, particularly salty food or liquid and olive oil, can cause damage if left on the printed surfaces for a long time.</p> <p>Do not use stainless steel cleaning agents on the printed flame symbols. This would rub off the print.</p>
<b>Pan supports</b>	<p>Remove the pan supports.</p> <p>Wash them in the <b>dishwasher</b> or with a sponge and warm water with a little washing-up liquid. If necessary, you could use the scouring pad on the reverse of a washing-up sponge.</p>	
<b>Controls</b>	Clean the controls with a solution of warm water and a little washing-up liquid applied with a soft sponge.	<b>Not dishwasher proof.</b>
<b>Burner cap</b>	<p>Clean the burner caps using an E-Cloth (see "Optional accessories") or with a solution of warm water and a little washing-up liquid applied with a soft sponge.</p> <p>If necessary, you could use the scouring pad on the reverse of a washing-up sponge.</p>	<b>Not dishwasher proof.</b>
<b>Burner head</b>	<p>Clean the burner heads using an E-Cloth (see "Optional accessories") or with a solution of warm water and a little washing-up liquid applied with a soft sponge.</p> <p>If necessary, you could use the scouring pad on the reverse of a washing-up sponge.</p>	<p><b>Not dishwasher proof.</b></p> <p>Make sure that the flame slits are completely dry after cleaning.</p>
<b>Ignitor Ignition safety device</b>	The ignitors and ignition safety devices should be very carefully wiped clean using a well wrung out cloth.	Do not let the <b>ignitors</b> get wet. If they get wet they will not spark.

### To assemble the small, medium and large burners

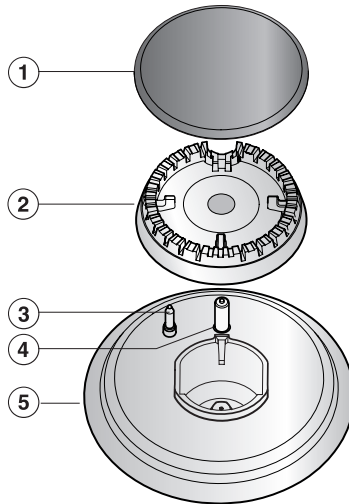


- Place the burner head ② on to the burner base ⑤ so that the ignitor safety device ④ and the ignitor ③ extend through their respective holes in the burner head. The burner head must click into place correctly.
- Place burner cap ① flat over burner head ②. When correctly positioned it will not slide about.

# Cleaning and care

---

## To assemble the wok burner

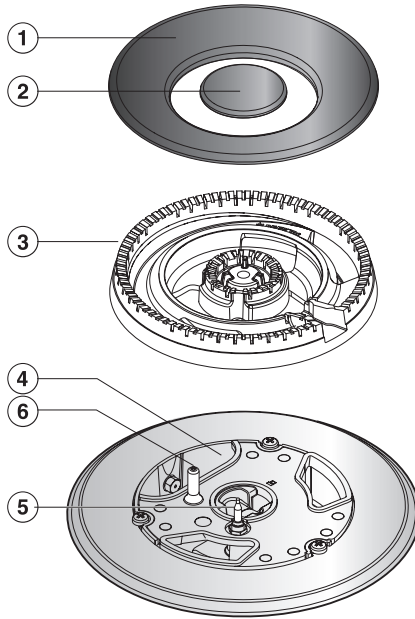

- Place burner head ③ onto burner base ④ so that the ignition safety device ⑤ and the ignitor ⑥ extend through their respective holes in the burner head. The burner head must click into place correctly.
- Place the burner caps ① and ② in position.
- Important: replace parts in the correct order after cleaning.

## Problem solving guide

With the help of the following notes, minor faults in the performance of the appliance, some of which may result from incorrect operation can be put right without contacting the Service Department saving you both time and money.

The following guide may help you to find the reason for a fault, and to correct it. You should, however, note the following:

 Repairs to the gas and electrical components of this appliance must only be carried out by a suitably qualified and competent person to ensure safety (Gas Safe registered in the UK). Repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

Problem	Possible cause	Remedy
The burner does not ignite when the hob is being used for the first time or after a long period of not being used.	There could be an air lock in the gas pipe.	Repeat the ignition process as necessary. Allow a minimum interval of 1 minute between each ignition attempt to prevent a build-up of unburnt gas.
The burner does not ignite after several attempts.		
	The burner is not correctly assembled.	Assemble the burner correctly.
	The gas supply tap is turned off.	Turn on the gas supply tap.
	The burner is wet or dirty.	Clean and dry the burner.
	The flame slits are blocked and/or wet	Clean and dry the flame slits.

# Problem solving guide

Problem	Possible cause	Remedy
The gas flame goes out after ignition	<p>The flames are not touching the ignition safety device, it is not hot enough:</p> <ul style="list-style-type: none"> <li>- The burner is not correctly assembled.</li> <li>- There is dirt on the ignition safety device.</li> </ul>	<p>Assemble the burner correctly.</p> <p>Remove any soiling.</p>
The flame pattern has changed	The burner is not correctly assembled.	Assemble the burner correctly.
	The burner head or burner cap holes are dirty.	Remove any soiling.
The flame goes out during operation	The burner is not correctly assembled.	Assemble the burner correctly.
The ignitor on the burner does not spark.	Check whether the mains fuse has tripped.	If it has, contact a qualified electrician or the Miele Service Department.
	<ul style="list-style-type: none"> <li>- Food residues between the ignitor and the burner cap.</li> <li>- Food residues on the ignition safety device</li> </ul>	Remove any soiling. Please see "Cleaning and care" for details.



## Optional accessories

Miele offer a comprehensive range of useful accessories as well as cleaning and conditioning products for your Miele appliances.

These can be ordered online at:



or from Miele (see back of manual for contact details).

### Cleaning products

#### Ceramic and stainless steel hob cleaner

250 ml



Removes heavy soiling, limescale deposits and light discolouration


#### Stainless steel conditioning agent

250 ml



Removes water marks, flecks and finger prints.  
Helps prevent re-soiling.

#### E-cloth (microfibre cloth)



Removes finger marks and light soiling.

# Safety instructions for installation

---

Fit the wall units and extractor hood before fitting the appliance to avoid damaging the surface.

► The room in which the gas hob is installed must be at least 20 m<sup>3</sup> in size with a door or window in it which can be opened to the outside air.

► The veneer or laminate coatings of worktops (or adjacent kitchen units) must be treated with 100 °C heat-resistant adhesive which will not dissolve or distort.  
Any backmoulds must be of heat-resistant material.

► This appliance must not be used in a non-stationary location (e.g. on a ship).

► An electric fryer must not be installed directly next to a gas hob, as the gas flames could ignite the fat in the fryer. It is essential to maintain a distance of at least 300 mm between these two appliances.

► A gas hob may not be built in over a fridge, fridge freezer, freezer, dishwasher, washing machine or tumble dryer.

► Ensure that the gas pipe and electrical cable are installed in such a way that they do not touch any parts of the appliance which become hot. This could cause damage.

► The electrical cable (and a flexible gas connection pipe in countries where applicable) must be installed in such a way so that they do not come into contact with any moving kitchen parts (e.g. a drawer), and cannot become trapped.


► Observe carefully the safety distances given on the following pages.

► Do not use any sealant except where expressly instructed to do so. The seal underneath the appliance provides a sufficient seal for the worktop.

All dimensions in this instruction booklet are given in mm.

# Safety instructions for installation

## Safety distance above the hob

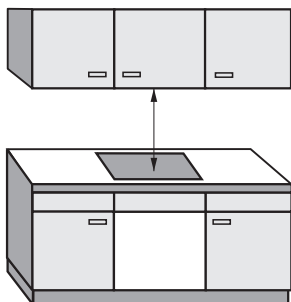

When two or more appliances are installed together below a cooker hood, e.g. a gas hob and an induction hob combiset, which have different safety distances given in the installation instructions, you should select the greater distance of the two.

A minimum safety distance must be maintained between the hob and the cooker hood above it. See the cooker hood manufacturer's operating and installation instructions for details.

If the manufacturer's instructions are not available for the cooker hood, a minimum safety distance of at least 760 mm must be maintained.


For any flammable objects, e.g. utensil rails, wall units etc. a minimum distance of at least 760 mm must be maintained between them and the hob below.

# Safety instructions for installation


## Safety distances to the sides and back of the hob

Ideally the hob should be installed with plenty of space on either side. There may be a wall at the rear or a tall unit or wall on one side (right **or** left) (see illustrations).


- ① Minimum distance of 50 mm between the **back** of the worktop cut-out and the rear edge of the worktop.
- ② Minimum distance of 150 mm between the worktop cutout and a wall or tall unit to the **right** of it.
- ③ Minimum distance of 150 mm between the worktop cutout and a wall or tall unit to the **left** of it.

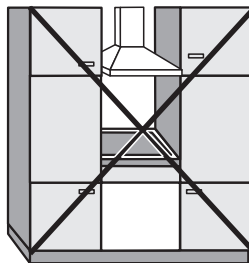


Not allowed

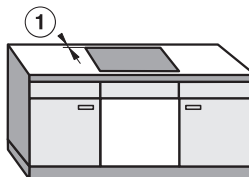

Recommended

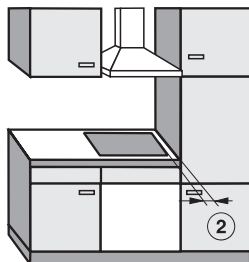


Not recommended

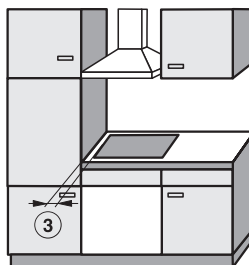

Not recommended

## Building-in dimensions

KM 2312

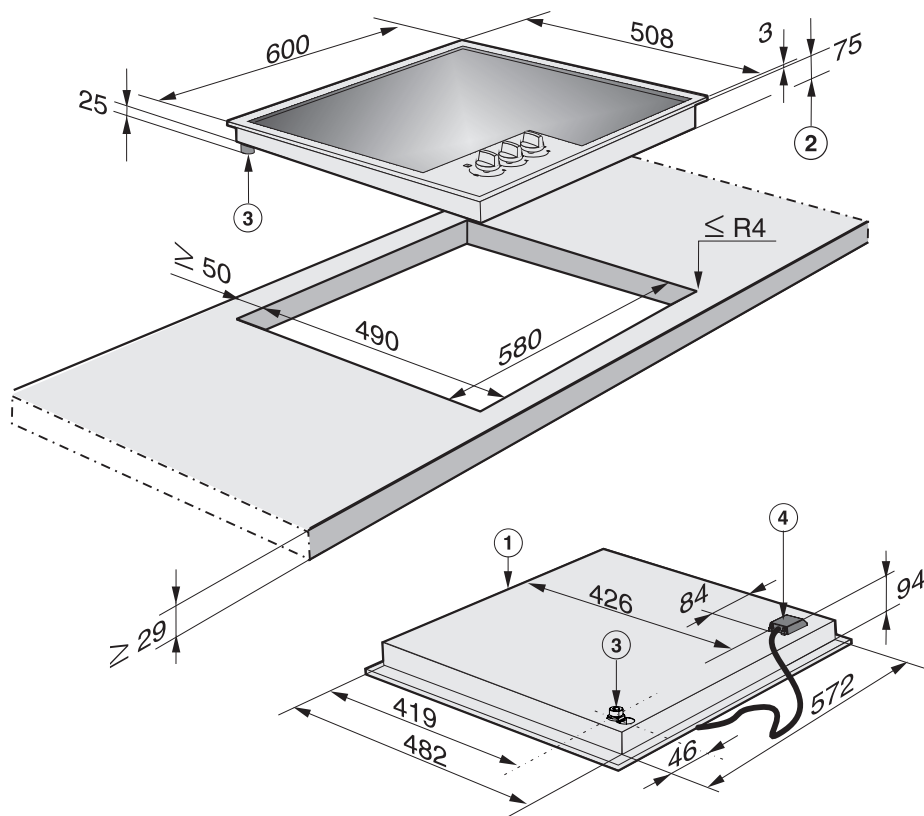


① Front

② Casing depth

③ Gas connection R 1/2 - ISO 7-1 (DIN 10226)

④ Mains connection box with mains connection cable, L = 2000 mm

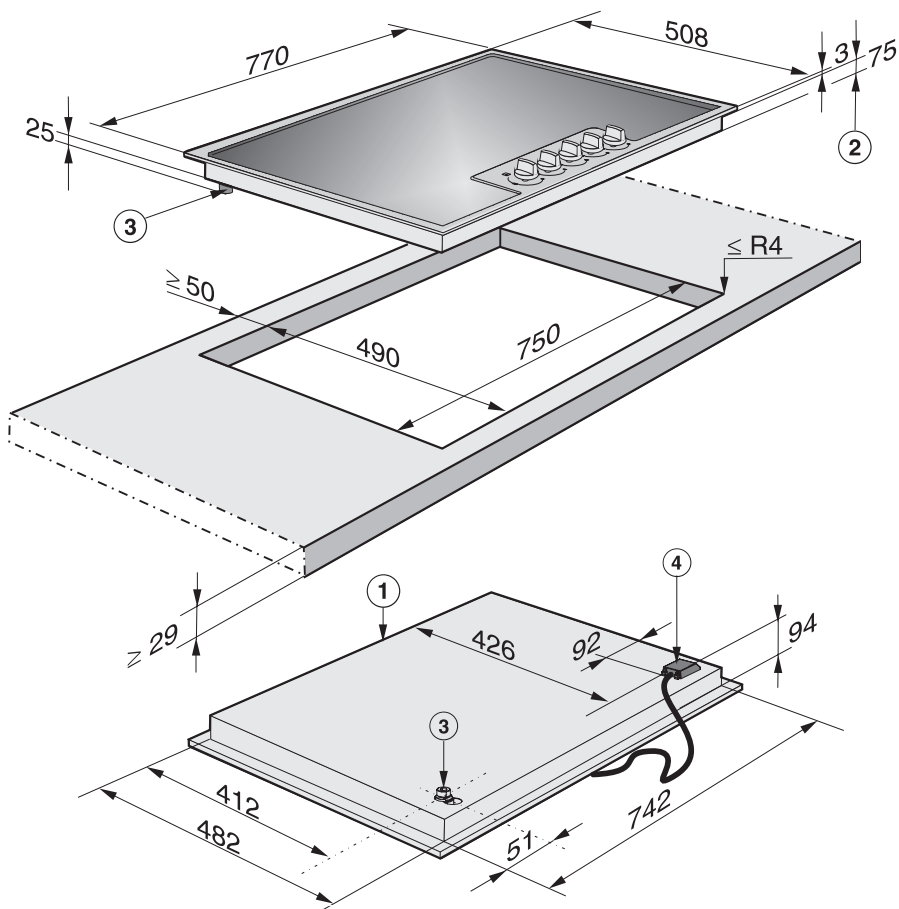

- ① Front
- ② Casing depth
- ③ Gas connection R 1/2 - ISO 7-1 (DIN 10226)
- ④ Mains connection box with mains connection cable, L = 2000 mm

### Installation

- Make the worktop cut-out as shown in "Building-in dimensions". Remember to maintain the **minimum safety distances** (see "Safety instructions for installation").
- Seal the cut surfaces on wood/laminated worktops with a suitable heat-resistant sealant to avoid swelling caused by moisture.

Make sure that the sealant does not come into contact with the top of the worktop.


- Feed the connection cable down through the cut-out.
- Place the hob in the cut-out without securing it.

If the corners of the frame are not flush with the worktop surface, the corner radius ( $\leq R4$ ) can be carefully scribed to fit.

- Connect the hob to the mains (see "Electrical connection").
- Connect the appliance to the gas supply (see "Gas connection").
- Secure the appliance at the back and front using the fixings supplied. See "Securing the appliance".

## Hobs with frame


### Seal between appliance and worktop

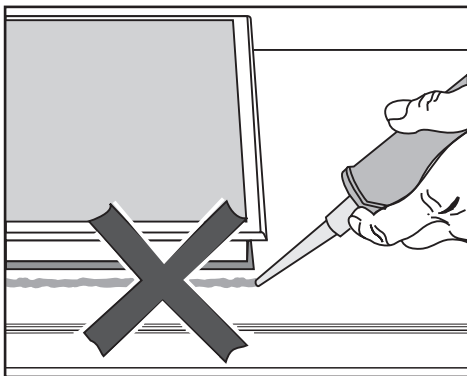

The sealing strip under the edge of the top part of the appliance provides a sufficient seal for the worktop.

The appliance must not be sealed with sealant (e.g. silicone). This could result in damage to the appliance or the worktop if the appliance ever needs to be removed for servicing.

### Tiled worktop

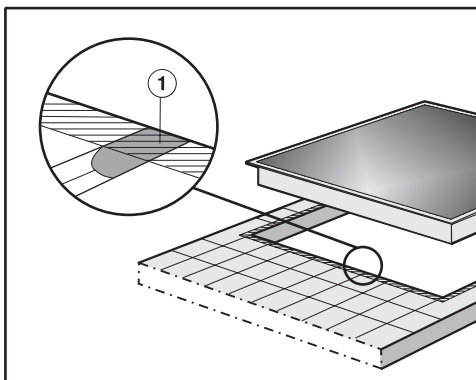


Grout lines ① and the hatched area underneath the hob frame must be smooth and even. If they are not the hob will not sit flush with the worktop and the sealing strip underneath the hob will not provide a good seal between the hob and the worktop.



## Building-in dimensions

KM 2335

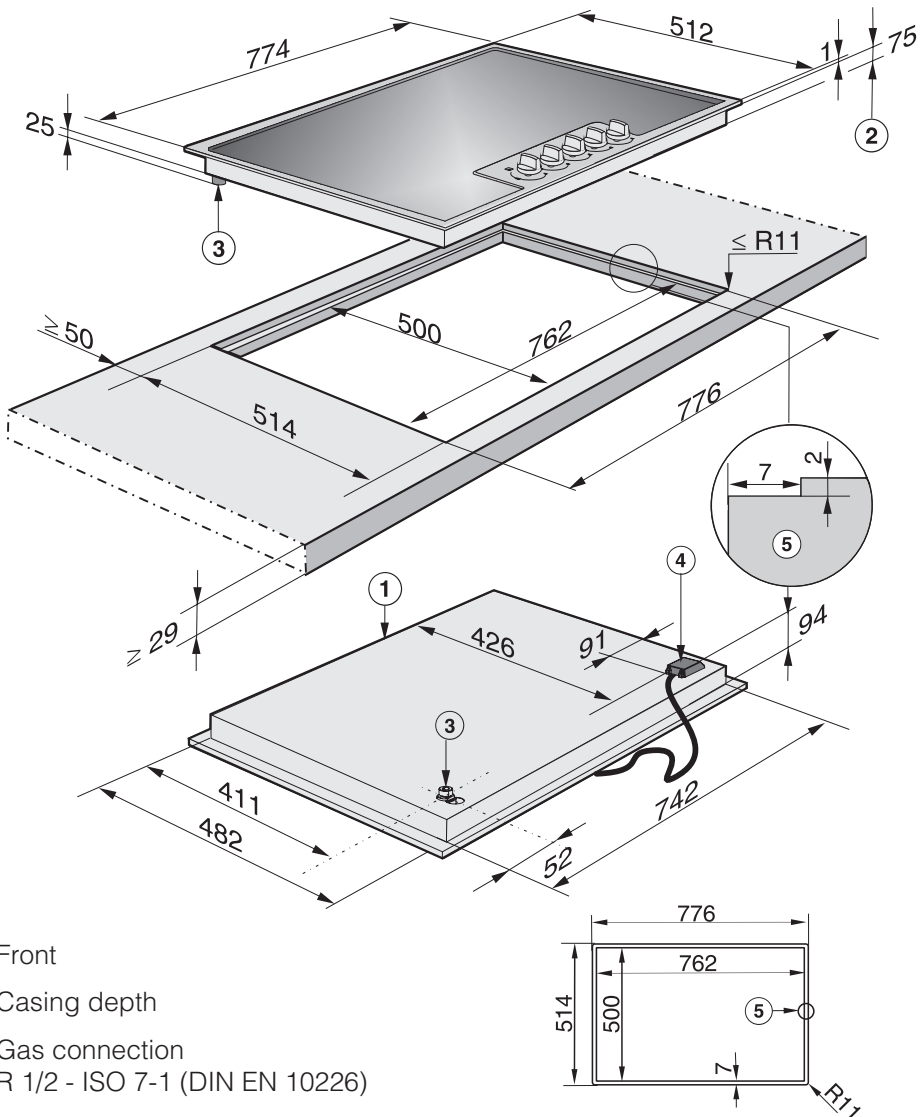

- ① Front
- ② Casing depth
- ③ Gas connection  
R 1/2 - ISO 7-1 (DIN EN 10226)
- ④ Mains connection box with mains  
connection cable, L = 2000 mm
- ⑤ Stepped cut-out for granite or marble  
worktops

**Please take careful note of the detailed diagrams for the cut-out dimensions in granite and marble worktops.**

## Flush fit hob

---

Flush fit gas hobs are only suitable for installation in granite, marble, tiled or solid wood worktops. When using a worktop made from any other material, please check first with the worktop manufacturer that it is suitable for installing a flush fit hob.

This appliance requires a 900 mm wide base unit for installation.


The hob must be accessible from below for servicing purposes and to ensure that the seal around it is not dislodged.

The hob may be fitted

- in a suitable cut-out in a granite or marble worktop.
- in a suitable cut-out in a tiled or solid wood worktop with a wooden support frame. The frame must be provided on site, and is not supplied with the appliance.

## Installation

### Granite and marble worktops

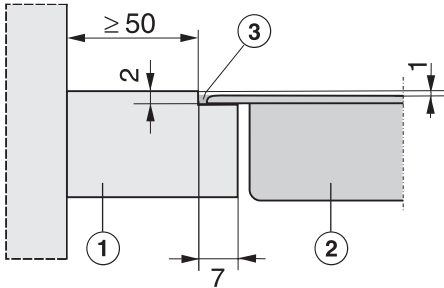

① Worktop

② Hob

③ Gap


As the ceramic glass and the worktop cut-out have a certain dimensional tolerance, the size of gap ③ can vary.

- Make the worktop cut-out as shown in "Building-in dimensions". Remember to maintain the **minimum safety distances** (see "Safety instructions for installation").
- Feed the connection cable down through the cut-out.
- Centre the hob ② in the cut-out.
- Connect the hob to the mains (see "Electrical connection").
- Connect the appliance to the gas supply (see "Gas connection").
- Secure the appliance at the back and front using the fixings supplied. See "Securing the appliance".
- Check that the hob works.
- Seal the remaining gap ③ with a silicone sealant that is heat-resistant to at least 160 °C.

For granite and marble worktops, only use silicone sealant that is especially formulated for granite and marble, and observe the sealant manufacturer's instructions.

# Flush fit hob

## Solid wood and tiled worktops

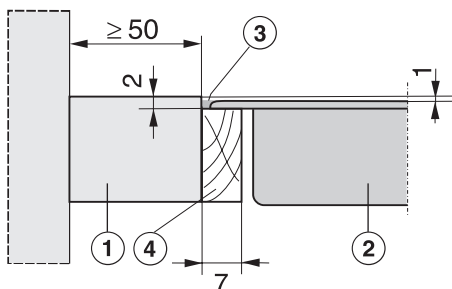

- ① Worktop
- ② Hob
- ③ Gap
- ④ Wooden frame 7 mm  
(to be provided on site)

As the ceramic glass and the worktop cut-out have a certain dimensional tolerance, the size of gap ③ can vary.


- Make the worktop cut-out as shown in "Building-in dimensions". Remember to maintain the **minimum safety distances** (see "Safety instructions for installation").
- Fix the wooden frame ④ 2 mm below the top edge of the worktop (see diagram).
- Feed the connection cable down through the cut-out.
- Centre the hob ② in the cut-out.
- Connect the hob to the mains (see "Electrical connection").
- Connect the appliance to the gas supply (see "Gas connection").
- Secure the appliance at the back and front using the fixings supplied. See "Securing the appliance".
- Check that the hob works.
- Seal the remaining gap ③ with a silicone sealant that is heat-resistant to at least 160 °C.



Please follow the manufacturer's instructions.

For **granite and marble tiles** only use a silicone sealant that is specifically formulated for granite and marble, and observe the sealant manufacturer's instructions.

## Building into a stainless steel worktop

This appliance can be welded into a stainless steel worktop. It is essential that after being welded, it is still recognisable as a Miele appliance.

 Welding must be carried out by a trained, Miele-approved person.

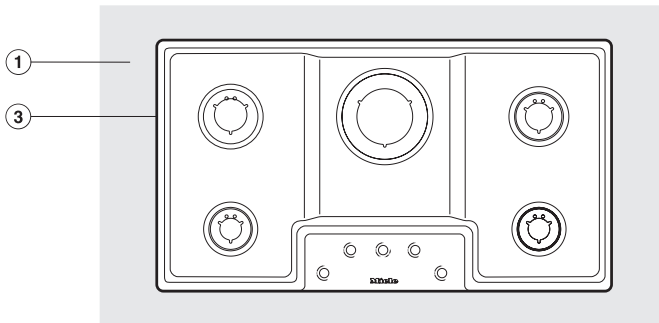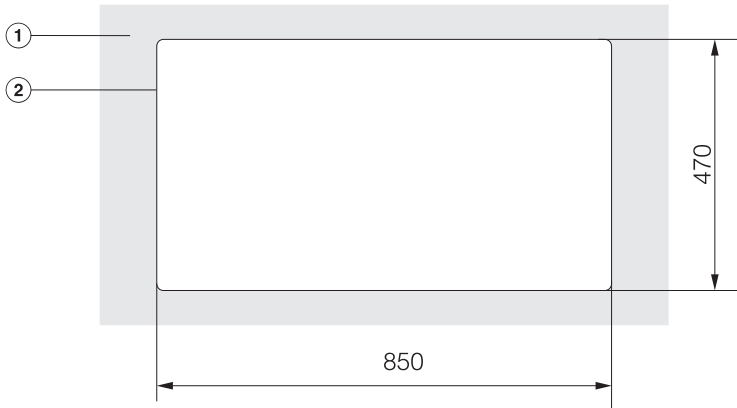


- ① Stainless steel worktop
- ② Lasered edge
- ③ Welded edge


## Securing the appliance

Secure the appliance as shown, using the fixings supplied.


### 20 mm worktop

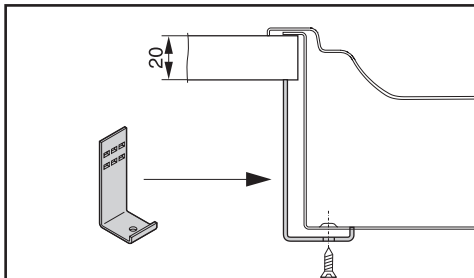

### 30 mm worktop

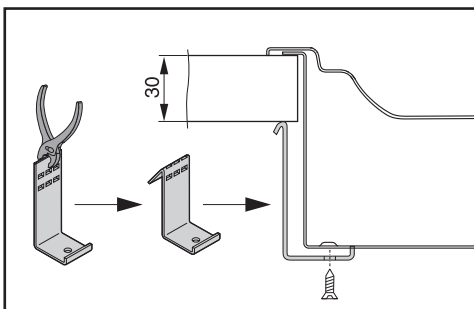

### 40 mm worktop

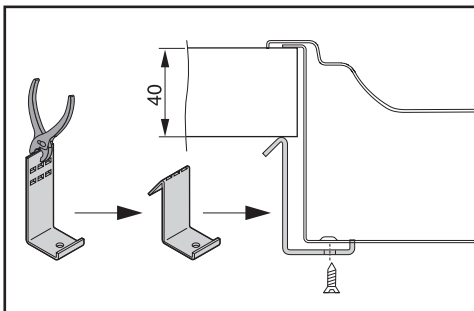

## After installation

Check that all the burners are operating correctly.

The flame must not go out on the lowest setting, or when the control is turned quickly from a high to a low setting.

On the highest setting, the flame must have a distinctive and visible core.

All electrical work should be carried out by a suitably qualified and competent person, in strict accordance with current local and national safety regulations (BS 7671 in the UK).

Installation, repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

Ensure power is not supplied to the appliance until after installation or repair work has been carried out.

The appliance must only be operated when built-in. This is to ensure that all electrical parts are shielded. Live parts must not be exposed.

Do not connect the appliance to the mains electricity supply by an extension lead. These do not guarantee the required safety of the appliance.

Please make sure that the connection data quoted on the data plate match the household mains supply.

Connection should be made via a suitable isolator or a double pole fused spur connection unit which complies with national and local safety regulations and the on/off switch should be easily accessible after the appliance has been built in.

If the switch is not accessible after installation (depending on country) an additional means of disconnection must be provided for all poles.

For extra safety it is advisable to protect the appliance with a suitable residual current device (RCD).

When switched off there must be an all-pole contact gap of 3 mm in the isolator switch (including switch, fuses and relays).

### Important UK

This appliance is supplied for connection to a single phase 230 V 50 Hz supply with a 3-core cable.

The wires in the mains lead are coloured in accordance with the following code:

Green/yellow = earth

Blue = neutral

Brown = live

**WARNING**  
**THIS APPLIANCE MUST BE**  
**EARTHED**

# Electrical connection

---


## Important

The electrical safety of this appliance can only be guaranteed if correctly earthed. It is most important that this basic safety requirement is observed and regularly tested and where there is any doubt, the electrical wiring in the home should be tested by a qualified electrician. The manufacturer cannot be held liable for the consequences of an inadequate earthing system such as an electric shock.

If the connection cable is damaged, it must be replaced by a suitably qualified electrician with a special connection cable of type H 05 V V-F (pvc insulated), available from the Miele Service Department.

The manufacturer cannot be held liable for damage which is the direct or indirect result of incorrect installation or connection.



 Connection to the gas supply, or conversion from one type of gas to another, should only be undertaken by an approved and registered gas installer in strict accordance with local and national safety and building regulations (e.g. Gas Safe registered in the UK).

Every appliance should have its own easily accessible isolating valve and test point.

Check with your local gas supplier about the type of gas and its calorific value and compare this information with the type of gas quoted on the hob data plate.

This appliance is not connected to an exhaust flue. Please ensure it has adequate ventilation after installation.

The installer is responsible for ensuring that the appliance functions correctly when installed.

Depending on country, the hob is supplied ready for connection to natural or liquid gas (refer to label on the appliance).

United Kingdom:

GB II 2 H 3+ 20 mbar, 28-30/37 mbar

Ireland:

IE II 2 H 3+ 20 mbar, 28-30/37 mbar

Depending on country, a set of jets for conversion to an alternative type of gas may be included with the hob.

Please contact your dealer or the Miele Spare Parts Department for the appropriate conversion jets if necessary.

Conversion to another type of gas is described under "Conversion to another type of gas".

**For any gas work in the UK always use a Gas Safe registered engineer.**



# Gas connection

## Connection

The gas connection must be installed so that connection can be made either from inside or outside the kitchen unit, and the isolating valve must be easily accessible and visible (by opening one of the kitchen doors, if necessary).

After installing the appliance the gas burners have to be set for local conditions.

When the gas hob has been installed, it is essential to check that neither the gas pipe nor the electricity cable is in contact with hot parts of the appliance or hot gas exhaust, otherwise heat damage to the pipe and cable could occur.

A test for possible leakages must be carried out after installation.


Safety regulations demand that a pressure test point is installed near a gas hob to allow an engineer to test the pressure, following servicing.

The appliance is supplied with an R 1/2" - ISO 7-1 (DIN EN 10226) gas connection point.

An appropriate rigid connection and isolating valve must be installed for final connection.

The gas connection must be so sited that it is not adversely heated when the appliance is in operation.

## Using a 90° angle

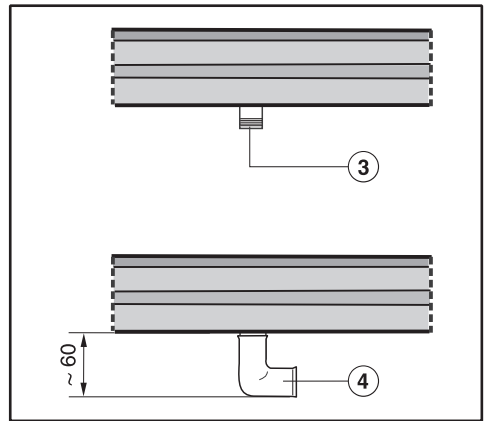

③ Gas connection R 1/2 - ISO 7-1 (DIN 10226)

④ 90° angle

Using a 90° angle will increase the building-in depth in the area of the gas connection by approx. 60 mm.

Nominal rating


KM 2312

Burner	Gas type	High setting		Low setting
		kW	g/h	kW
Small burner	Natural gas H	1.0	-	0.25
	Liquid gas	1.0	73	0.25
Large burner	Natural gas H	2.7	-	0.50
	Liquid gas	2.7	196	0.50
Wok	Natural gas H	4.0	-	1.10
	Liquid gas	4.0	291	1.10
Gesamt	Natural gas H	7.7	-	
	Liquid gas	7.7	560	

KM 2334 / KM 2335

Burner	Gas type	High setting		Low setting
		kW	g/h	kW
Small burner	Natural gas H	1.0	-	0.25
	Liquid gas	1.0	73	0.25
Medium burner front	Natural gas H	1.7	-	0.30
	Liquid gas	1.7	124	0.30
Medium burner rear	Natural gas H	2.0	-	0.30
	Liquid gas	2.0	146	0.30
Wok	Natural gas H	4.0	-	1.10
	Liquid gas	4.0	291	1.10
Total	Natural gas H	10.7	-	
	Liquid gas	10.7	779	

# Conversion to another type of gas

 Connection to the gas supply, or conversion from one type of gas to another, should only be undertaken by an approved and registered gas installer in strict accordance with local and national safety and building regulations (e.g. Gas Safe registered in the UK).

When converting to a different type of gas, the main burner jets and the small burner jets have to be changed.

## Jet table

	Main jetØ	Small jetØ
Natural gas H		
Small burner	0.76	0.39
Front medium burner	0.94	0.42
Back medium burner	1.03	0.42
Large burner	1.20	0.54
Wok burner	1.45	0.80
Liquid gas		
Small burner	0.52	0.23
Front medium burner	0.66	0.36
Back medium burner	0.72	0.36
Large burner	0.81	0.42
Wok burner	0.97	0.54

The jet markings refer to 1/100 mm of the jet diameter.


# Conversion to another type of gas

## Changing the jets

Disconnect the gas hob from the mains electricity supply. Turn off the gas supply.

## To change the main jets

### Small, medium and large burners

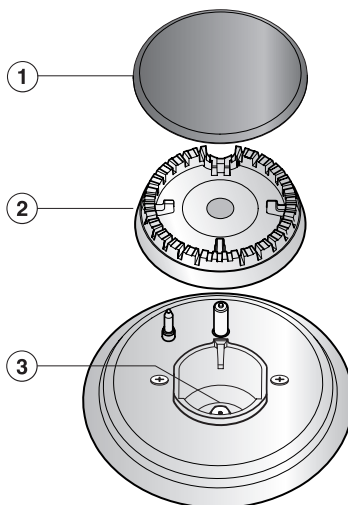

- Remove the pan support, burner cap ① and burner head ②.
- Using an M7 socket spanner, unscrew main jet ③.
- Change the main jet.

# Conversion to another type of gas

---


## Wok burner

- Remove burner cap ①② and burner head ③.
- Using an M7 socket spanner, unscrew the main jet ④
- Fit the correct jets securely (see jet table).
- Finally, secure the jets against inadvertent loosening with sealing wax.

### To change the small jets

To change the small jets, the burner securing screws must first be loosened and the upper section of the appliance removed.

- Pull the control knobs off.
- Remove the cover (see illustration).
- Loosen the screws.
- Lift the top of the appliance off.

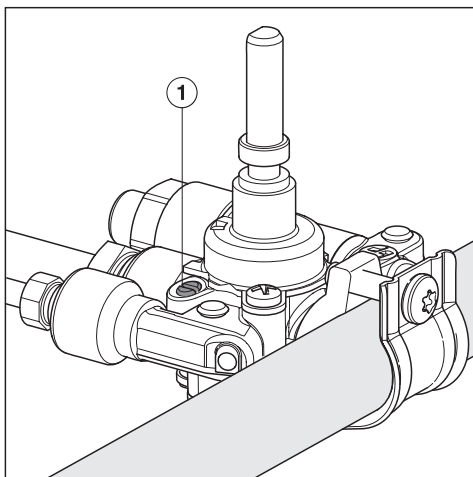

- Using a small screwdriver, unscrew small jet ① in the gas fitting.
- Pull out the jet with a pair of pliers.
- Fit the correct jets securely (see jet table).
- Finally, secure the jets against inadvertent loosening with sealing wax.

# Conversion to another type of gas

---

## Function test

Check all gas fittings for leaks.

- Reassemble the appliance.
- Check the burner flame by operating the burner.

The flame must not go out on the lowest setting, or when the control is turned quickly from a high to a low setting.

On the highest setting, the flame must have a distinctive and visible core.

- Stick the label supplied with the jets above the label stating the type of gas being used.



## After sales service, data plate, guarantee

---


In the event of any faults which you cannot remedy yourself, please contact:

- your Miele dealer, or
- Miele (see back of manual for contact details).

Please note that telephone calls may be monitored and recorded for training purposes (UK only).

When contacting your Dealer or Miele, please quote the model and serial number of your appliance. These are given on the data plate.

Space in which to stick the extra data plate supplied with the appliance. Ensure that the model number is the same as the one on the back of these instructions.



### Guarantee

For information on the appliance guarantee specific to your country please contact Miele. See back of manual for contact details. In the UK, your appliance is guaranteed for 2 years from the date of purchase. However, you must activate your cover by calling 0845 365 6640 or registering online at [www.miele.co.uk](http://www.miele.co.uk).



## United Kingdom

Miele Co. Ltd.  
Fairacres, Marcham Road  
Abingdon, Oxon, OX14 1TW  
Tel: 0845 365 0555  
Customer Contact Centre Tel: 0845 365 6600  
E-mail: [info@miele.co.uk](mailto:info@miele.co.uk)  
Internet: [www.miele.co.uk](http://www.miele.co.uk)

## Australia

Miele Australia Pty. Ltd.  
ABN 96 005 635 398  
1 Gilbert Park Drive, Knoxfield, VIC 3180  
Tel: 1300 464 353, Fax: (03) 9764 7149  
Internet: [www.miele.com.au](http://www.miele.com.au)

## China

Miele (Shanghai) Trading Ltd.  
1-3 Floor, No. 82 Shi Men Yi Road  
Jing' an District  
200040 Shanghai, PRC  
Tel: +86 21 6157 3500, Fax: +86 21 6157 3511  
E-mail: [info@miele.cn](mailto:info@miele.cn), Internet: [www.miele.cn](http://www.miele.cn)

## Miele (Hong Kong) Limited

41/F - 4101, Manhattan Place  
23 Wang Tai Road  
Kowloon Bay, Hong Kong  
Tel: (852) 2610 1331, Fax: (852) 2610 1013  
Email: [mielehk@miele.com.hk](mailto:mielehk@miele.com.hk)

## India

Miele India Pvt. Ltd.  
Ground Floor, Copia Corporate Suites  
Plot No. 9, Jasola  
New Delhi - 110025  
Tel: 011-46 900 000, Fax: 011-46 900 001  
E-mail: [customercare@miele.in](mailto:customercare@miele.in), Internet: [www.miele.in](http://www.miele.in)

## Ireland

Miele Ireland Ltd.  
2024 Bianconi Avenue  
Citywest Business Campus, Dublin 24  
Tel: (01) 461 07 10, Fax: (01) 461 07 97  
E-Mail: [info@miele.ie](mailto:info@miele.ie), Internet: [www.miele.ie](http://www.miele.ie)

## Manufacturer: Miele & Cie. KG

Carl-Miele-Straße 29, 33332 Gütersloh, Germany

# Miele

## Malaysia

Miele Sdn Bhd  
Suite 12-2, Level 12  
Menara Sapura Kencana Petroleum  
Solaris Dutamas No. 1, Jalan Dutamas 1  
50480 Kuala Lumpur, Malaysia  
Phone: +603-6209-0288  
Fax: +603-6205-3768

## New Zealand

Miele New Zealand Limited  
8 College Hill  
Freemans Bay, Auckland 1011, NZ  
Tel: 0800 464 353, Fax: +64 9378 0146  
Internet: [www.miele.co.nz](http://www.miele.co.nz)

## Singapore

Miele Southeast Asia  
Miele Pte. Ltd.  
163 Penang Road  
# 04 - 02/03 Winsland House II  
Singapore 238463  
Tel: +65 6735 1191, Fax: +65 6735 1161  
E-Mail: [infosea@miele.com.sg](mailto:infosea@miele.com.sg)  
Internet: [www.miele.sg](http://www.miele.sg)

## South Africa

Miele (Pty) Ltd  
63 Peter Place, Bryanston 2194  
P.O. Box 69434, Bryanston 2021  
Tel: (011) 875 9000, Fax: (011) 875 9035  
E-mail: [info@miele.co.za](mailto:info@miele.co.za)  
Internet: [www.miele.co.za](http://www.miele.co.za)

## United Arab Emirates

Miele Appliances Ltd.  
P.O. Box 11 47 82  
Gold & Diamond Park  
Sheikh Zayed Road  
Building 6 / Offices Nos. 6-214 to 6-220  
Dubai  
Tel: +971-4-341 84 44  
Fax: +971-4-341 88 52  
E-Mail: [info@miele.ae](mailto:info@miele.ae)  
Internet: [www.miele.ae](http://www.miele.ae)

KM 2312 / KM 2334 / KM 2335